

Untitled1: Programming Barcodes for DS2278

Configuration name in Utility : Untitled1
Last Modified : 30-May-19
Windows Filename : Config File_DS2278_Untitled1_2019.05.30_Glantt.scncfg
Plug-in Name : DS2278-STANDARD SR MODELS + CRADLE-015
Report Type : Only parameters changed from defaults shown



Untitled1: Programming Barcodes for DS2278

Configuration name in Utility : Untitled1
Last Modified : 30-May-19
Windows Filename : Config File_DS2278_Untitled1_2019.05.30_Glantt.scncfg
Plug-in Name : DS2278-STANDARD SR MODELS + CRADLE-015
Report Type : Only parameters changed from defaults shown



Set Defaults

Symbology (bar code type) Settings

Other 2D Symbologies

GS1-Datamatrix	Enable
QR Code	Disable
MicroQR	Disable
Aztec	Disable

Modify Data- Advanced Data Formatting

Erase All Rules

Begin New Rule

1. Send All that remains

2. Send Extended Key <Enter>

Save Rule

Begin New Rule

1. MoveTo All Patterns and Replace <<GS>> with <#>

<GS>

End of Message

#

End of Message

Untitled1: Programming Barcodes for DS2278

Configuration name in Utility : Untitled1
Last Modified : 30-May-19
Windows Filename : Config File_DS2278_Untitled1_2019.05.30_Glantt.scncfg
Plug-in Name : DS2278-STANDARD SR MODELS + CRADLE-015
Report Type : Only parameters changed from defaults shown



-
2. Skip To Start
 3. Send All that remains
 4. Send Extended Key <Enter>
- Save Rule

General Parameter Settings

System

keyboard country type	Portuguese Portugal
Transmit Code Id	AIM Code ID
Picklist Mode	Enabled Always
Configuration File	Untitled1

Firmware:

SAADFS00-001-R04

Supported Scanner Models for Plug-in :

CR2278-PC10004WW

DS2278-SR00006ZZWW

DS2278-SR00007ZZWW

DS2278-SR00007ZZY